

ENG RM J-BOX

PANEL

12 =	RED + 12	VDC	RESTABLE
	BLK - DC		
	GRN	from 6 - GRN	
	WHT	from 6 - WHT	
	ORG	HEAT	
	BLU	HEAT	
	YEL	- ENG RM SMK	
	BRN	- ENG RM SMK	
	VIL		
	GRY		
	PNK		
	TAN		

FROM BILGE

6 =	RED		
	BLK		
BILGE	GRN	to 12 - GRN	
BILGE	WHT	to 12 - WHT	
	ORG		
	BLU		

HELM 6WH J-BOX

6	RED	+	12VDC	
	BLK	-	DL	
	GRN	HELM	SMK	
	WHT	HELM	SMK	
	ORG	+	12VDC	RESTABLE
	BLU	+	TRIGGER	for HAILER
12	RED			
	BLK			
	GRN			
	WHT			
	ORG			
	BLU			
	YEL			
	BRN			
	VIL			
	GRY			
	PNK	+	DATA	
	TAN	+	DATA	

ZONE

33	DOOR			
34	SEAT	-	TACKLE	- FWD
35	SEAT	-	TACKLE	- STBD
36	HATCH-		W.H.	
37	-			
38	-			
39	-			
40	-			

DECK J-BOX

RED	-	
BLK	-	
GRN	-	
WHT	-	
ORG	+	DATA
BLU	-	DATA

LAZZ J-BOXTO PANEL

12 =	RED	- +	12 VDC
	BLK	- -	DC
	GRN=	from 6 -	GRN
	WHT=	from 6 -	WHT
	ORG=	LED 6 +	ORG
	BLU=	LED 6 -	BLU
	YEL=	ZONE 8 -	TRIGGER
	BRN=		
	VIL=	+ 12	VDC
	GRY=	- DC	SWITCH FOR DECK
	PNK=	+ DATA	
	TAN=	- DATA	

TO KEYPAD

6 =	RED	+	12 VDC
	BLK	-	DC
	GRN=	12	GRN
	WHT=	12	WHT
	LED + ORG=	12	ORG
	LED - BLU=	12	BLU

TO PANEL

2 =	RED	+	SPK
	BLK	-	SPK

GALLEY J-BOX (Behind TV)

<u>GRY</u>	12=	RED	+	12VDC	RESTABLE
		BLK	-	DC	
		GRN	-	MOTION SALON	
		WHT	-	MOTION SALON	
		ORG	-	HEAT	- GALLEY
		BLU	-	HEAT	- GALLEY
		YEL	+	STROB SALON	
		BRN	-	STROB SALON	
		VIL	-	CO	- GALLEY
		GRY	-	CO	- GALLEY
		PNK	-	+	SPK
		TAN	-	-	SPK

GRY

4 =	RED	+	12 VDC
	BLK	-	DC
	GRN	-	HALL CO
	WHT	-	HALL CO

FLY J-BOX

6	RED		
	BLK		
	GRN		
	WHT		
	ORG	-	DATA
	BLU	-	DATA
41-	DOORS	-	F.B. FWD
42-	SEAT	-	F.B. FWD
43-	SEAT	-	F.B. STBD
44-	DOORS-	-	F.B. AFT
46-			
47-			
48-			

MSTR ST RM JUNCTION

12 =	RED	+	12 VDC	
	BLK	-	DC	
	GRN		DATA	(Touch Pad)
	WHT		DATA	(Touch Pad)
	ORG	-	SWITCH	
	BLU	-	SWITCH	
	YEL	- -	LED	
	BRN	- +	LED	
	VIL	-	VCR	TRIGGER
	GRY	-	VCR	TRIGGER

BYTE ME ZONE LIST**PANEL**

1. BILDGE - VIP - FWD
2. BILDGE - MSR - MID
3. BILDGE - ENG - AFT
4. -
5. -
6. -
7. -
8. CKPT DECK
9. CO-GALLEY
10. CO-HALLWAY
11. SMOKE - W.H.
12. MOTION - SALON
13. SMOKE - HALLWAY
14. SMOKE - ENG RM
15. HEAT - GALLEY
16. HEAT - GALLEY (NEW) 8-2-00

HELM

17. DOOR - W.H.
18. DOOR - SALON
19. DOOR - ENG RM
20. HATCH - FWD SRM
21. HATCH - PT - MSR
22. HATCH - STBD - MSR
23. HATCH - PT - SRM
24. HATCH - STBD - SRM

LAZZ

25. DOORS - CKPT - PORT
26. DOORS - CKPT - STBD
27. HATCH - CKPT - PORT
28. HATCH - CKPT - STBD
29. HATCH - CKPT - FISH
30. HATCH - CKPT - LAZZ
31. BILDGE - LAZZ - AFT
32. SPARE = _____

W.H.

33. DOOR - TACKLE - FWD
34. SEAT - TACKLE - STBD
35. SEAT - TACKLE - AFT
36. HATCH - W.H.
37. -
38. -
39. -
40. -

FLY B

41. DOORS - F.B. - FWD
42. SEAT - F.B. - FWD
43. SEAT - F.B. - STBD
44. DOOR - F.B. - STBD
45. DOORS - F.B. - AFT
46. -
47. -
48. -

VOICE

1. FIRE
2. SECURITY
3. HIGH WATER
4. -

TRIGGERS

1. V - 1
2. V - 2
3. V - 3
4. V - 4
5. HAILER RELAY
6. STROB





3325 Griffin Road, Suite #202
Ft. Lauderdale, FL 33312
Telephone: (954) 962-6677 • Fax: (954) 989-3325

MXL-4
(INSTRUCTION SHEET)

EXIT:

(TOUCH PAD SHOULD READ **SYSTEM READY**).

ENTER C O D E or # then 1 (NORMAL ARMING, MUST CLOSE ALL OPENINGS).

PUSH # then 2 (FORCED ARMING/WILL AUTOMATICALLY BYPASS OPENINGS)

ENTER:

TOUCHPAD (SOUNDS).

ENTER CODE _ _ _ _ (or alarm will sound after 30 seconds).

INSTANT:

PUSH INSTANT BUTTON.

ARM SYSTEM: (ALARM WILL SOUND IMMEDIATELY, NO DELAYS).

STAY:

PUSH STAY BUTTON. (TO BYPASS INTERIOR DEVICES).

ARM SYSTEM: C O D E.

CHANGE CODE:

PUSH CODE BUTTON.

ENTER OLD CODE _ _ _ _.

ENTER 0 0 1 (USER 0 1).

ENTER NEW CODE _ _ _ _.

AUTHORITY LEVEL 1 THEN PRESS * TO RESET.

DIRECTORY: PUSH # THEN 4.

BYPASS: PUSH BYPASS BUTTON.

ENTER ZONE TO BE BYPASSED _ _ _.

ENTER ZONE TO BE UN-BYPASSED - - -.

CHIME: PUSH # THEN 6.

PANIC: PUSH # AND * SIMULTANEOUSLY.

TURN OFF ALARM:

ENTER CODE _ _ _ _ (WILL TURN OFF ALARM SOUND).

PUSH * TO CLEAR MEMORY.